## Creating a New Ditch

**Verify** you are in SVY mode





1 → *Start* at the **High Point** of the Ditch with the **blade** raised **up** 









and *Drive* to Low Point (outlet) of the ditch

3**→** *Press* 







and *lower* the **blade** to the **ground** 

4→ Press







to **design** the **ditch** 

**Verify** the menu bar looks like this



5 → *Toggle* Machine Control on your tractor and cut the ditch









when **done** to **start** a new **ditch** 

## Recalling an Existing Ditch



Verify the GPS correction is the same as when the ditch was designed

- 1 → *Drive* to a **ditch** that has already been **designed**
- 2**→ Press** and **hold**



to open the Pass Menu

3**→** Select





DWK (Ditch Reworking)

4**→** Press







to cut the recalled ditch

- 5 Toggle Machine Control on your tractor and cut the ditch
- 6**→** Press



to recall the ditch you are closest to